



How to Install an Outdoor Dryer

TYPES A : CS78168, 90242

TYPES B : CS78165, CS78159, CS78130

Before installation

Choose an open area with a maximum of sun exposure and wind to install your dryer. Allow enough space for the dryer to open fully.

1. Insert the ground anchor in the ground.
- 2A. With the clothes dryer still in the closed position, screw the dryer in the ground anchor.
- 2B. With the clothes dryer still in the closed position, screw the main pole into the extension making sure it is securely in place. Place the assembled dryer into the ground anchor.
3. Before opening your clothes dryer, make sure all the lines of your clothes dryer are hanging freely. Do not force the dryer to open. If the clothes dryer does not open easily, inspect for tangled lines. Push up the middle part of the dryer stays open.

After Installation

- It is typical for the clothesline to have a tendency to stretch and it will be necessary to occasionally tighten the line.
- Do not attempt to take up all the slack in the clothesline. Over tightening the line will put unnecessary strain on the dryer, will make it difficult to open and may even cause damage.