




Tilt bin section set-up

Step 1

Use an MDF or plywood board. Cut according to your needs in height.

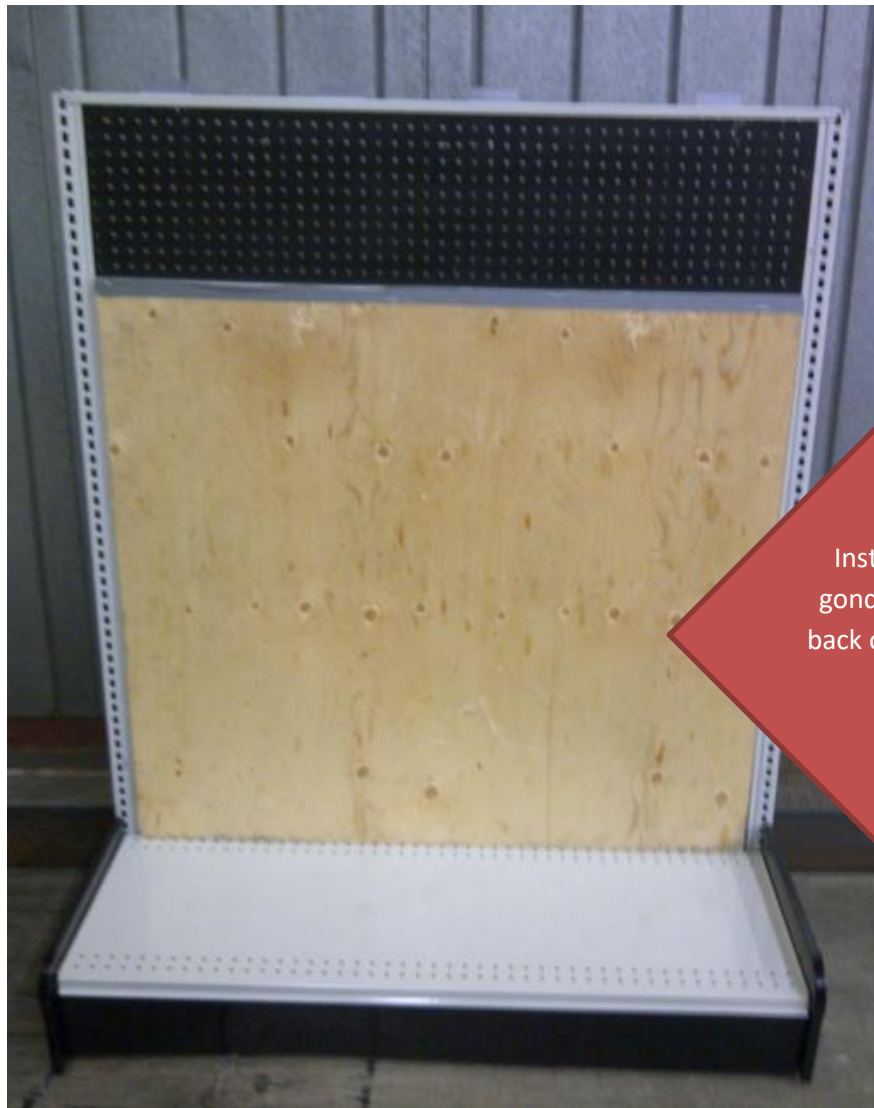

Install an MDF or plywood board on frame of gondola or by screwing into the board from the back of the pegboard. Ensure screws do not cross over onto board



Step 2

Remove drawers from bin section. Install each section as per your needs.



Install bin section from bottom to top (start with larger bins first)



Step 3

Secure bins into place.



Secure bins with screws in appropriate areas

Secure bins with screws in appropriate areas



Step 4

Once bins are secure, replace drawers into place and repeat steps 1 to 4.





Final result (example)

NB. The result may vary according to your listing.

